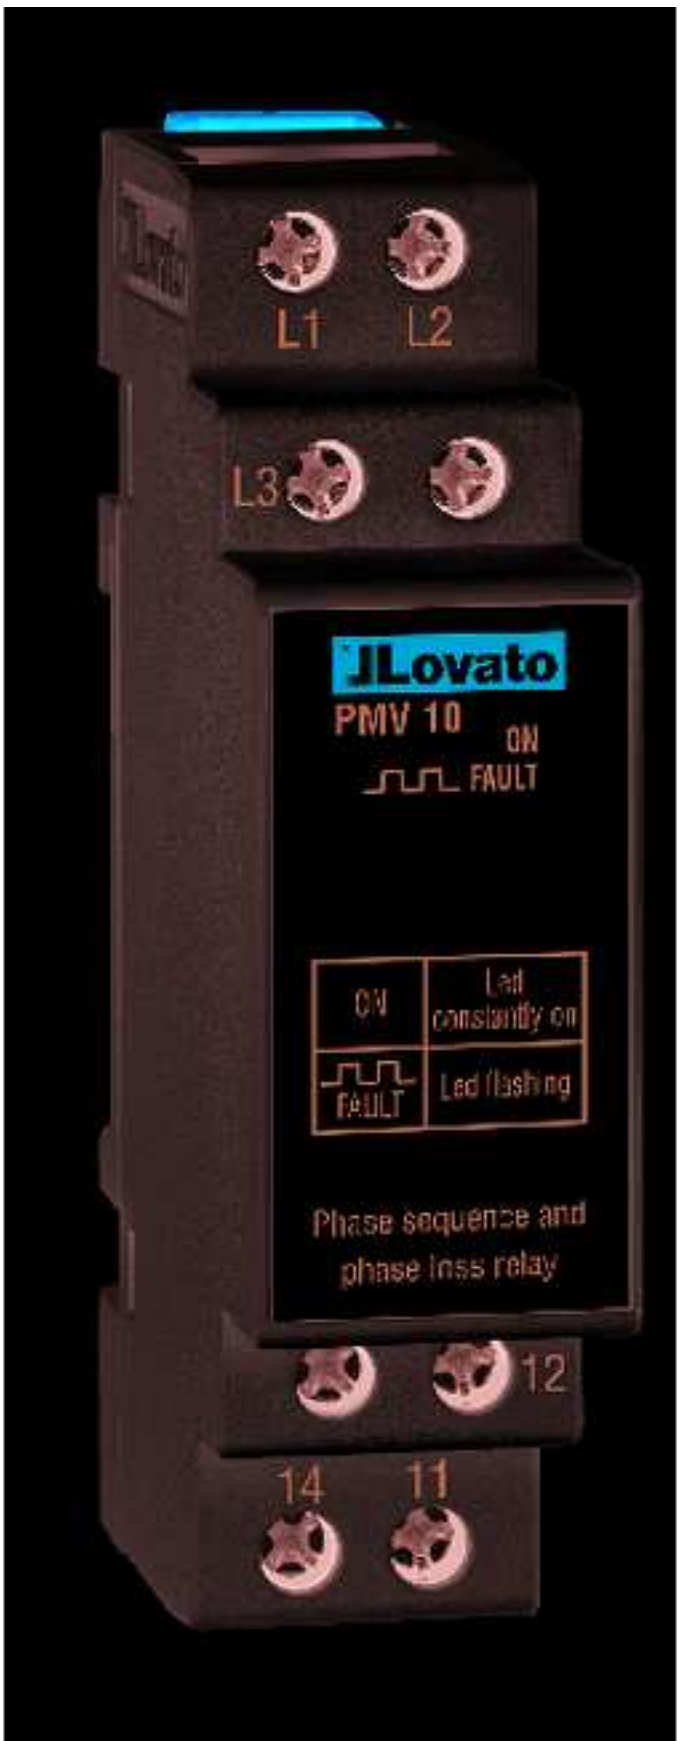
L1
L2
L3
JLovato
PMV 10
ON
FAULT
ON
Led constantly on
FAULT
Led flashing
Phase sequence and phase loss relay
12
14
11